


## Aviz important!

Dispozitivul poate fi utilizat numai în aer liber, în modul GPS. Atunci când este utilizat în interior, este necesar ca air dropper să nu se suprapună peste camera inferioară a dronei, ceea ce asigură stabilizarea acesteia în modul non-GPS.


Aveți grijă să evitați deteriorarea bunurilor sau a sănătății atunci când manipulați încărcătura transportată

**Compatibilitate:** în prezent potrivit pentru **drona AERIUM SG MAX GPS (max. 100 g greutate de încărcare)** și pentru **drona AERIUM 4DRC M1 PRO GPS 6K (max. 50 g greutate de încărcare)** din oferta noastră.

## MANUAL DE UTILIZARE

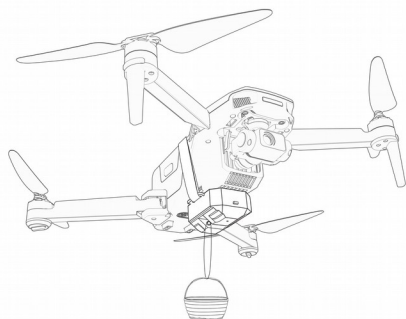

### Introducerea aruncătorului

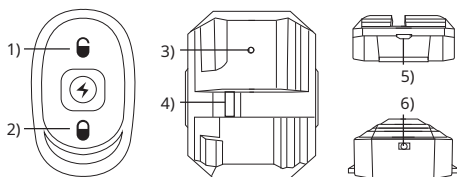

Fața telecomenzii

Fața aruncătorului

- 1) Blocare 3) LED aruncător 5) Priză de încărcare a aruncării  
2) Deblocări 4) Blocare aruncător 6) Întrerupător de alimentare al aruncătorului

### Etape de instalare

1. introduceți bandajul în orificiul regulatorului (pansament reglabil)
2. Se poate fixa pe vehiculul aerian fără pilot (evitați senzorul de pe partea de jos a vehiculului aerian fără pilot).

3. Aruncătorul poate suspena obiecte (pe baza greutății sustenabile a tipului)


\* Greutatea maxima a aruncătorului este de 750 de grame

### Operațiune

1. Apăsati lung comutatorul de alimentare al aruncătorului
2. Apăsati scurt comutatorul de pornire a aruncătorului pentru a debloca și apăsați din nou pentru a bloca.
3. Apăsati butonul de deblocare de pe telecomandă, lacătul este deblocat și portul poate fi plasat.
4. Apăsati butonul de blocare a telecomenzii pentru a bloca blocarea.


### Aplicație

Pentru UAV realizați transmisia de obiecte la distanță




### Instrucțiuni de încărcare pentru aruncător și telecomandă

Încărcarea dispozitivului: conectați cablul de încărcare USB la sursa de alimentare, apoi conectați celălalt capăt al cablului de încărcare USB la portul de încărcare a dispozitivului.

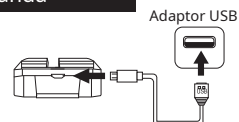

Încărcare aruncător: lumina roșie este întotdeauna aprinsă când se încarcă, iar lumina este stinsă când este complet încărcată. Timpul de încărcare al aruncătorului este de aproximativ 30 de minute, iar timpul de utilizare este de aproximativ trei ore. Operațiunea efectivă depinde de scena de adaptare.




Telecomanda folosește o baterie buton CR2032

### Stare comună și soluție

Fenomen de eroare	Motiv	Soluție
Nu se poate debloca	oprit	Porniți

### Lista de componente

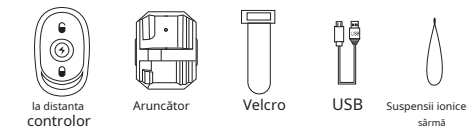

FABRICATE ÎN CHINA


## Important notice!

The device can only be used outdoors in GPS mode. When used indoors it is necessary that the air dropper does not overlap the bottom camera of the drone, which ensures its stabilization in non-GPS mode.


Take care to avoid damage to property or health when handling the load being carried.

**Compatibility:** currently suitable for **AERIUM SG MAX GPS drone (load weight max. 100 g)** and **AERIUM 4DRC M1 PRO GPS 6K drone (load weight max. 50 g)** from our offer.

# USER MANUAL

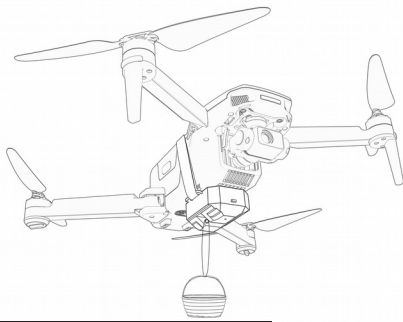

## Introduction of thrower

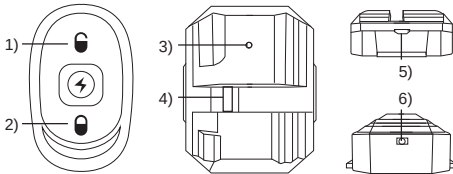

Front of Remote      Front of Thrower

- 1) Lock    3) Thrower LED    5) Charging socket of the thrower  
2) Unlock    4) Thrower lock    6) Power switch of the thrower


## Installation steps

1. insert the bandage into the hole of the regulator (adjustable bandage)
  2. Can fix on the unmanned aerial vehicle (avoid the sensor on the bottom of the unmanned aerial vehicle).
  3. The thrower can suspend objects (based on the sustainable weight of the type)
- \* The maximum weight of the thrower is 750 grams



## Operation

1. Long press the power switch of the thrower
2. Briefly press the thrower power switch to unlock and press again to lock.
3. Press the unlock button on the remote control, the lock is unlocked, and the port can be placed.
4. Press the remote control lock button to lock the lock.

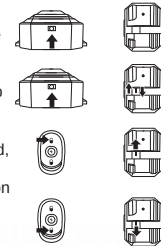


## Application

For the UAV realize remote object transmission




## Thrower and Remote Control Charging Instructions

Thrower charging: Connect the USB charging cable to the power supply, and then connect the other end of the USB charging cable to the thrower charging port.

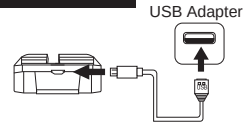

Thrower charging: The red light is always on when charging, and the light is off when fully charged. The charging time of the thrower is about 30 minutes, and the usage time is about three hours. The actual operation depends on the adaptation scene.




The remote control uses a CR2032 button battery

## Common status and solution

Fault phenomenon	Reason	Solution
Unable to unlock	off	Turn on

## Parts List

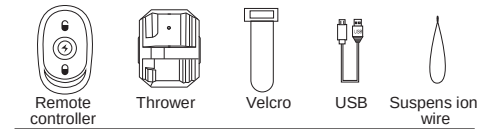

MADE IN CHINA